

Introduction

This installation guide provides instructions for installation, startup and adjustment. To receive a copy of the instruction manual, contact your local Sales Office or view a copy at www.fisherregulators.com. For further information refer to Type MR108 Instruction Manual, Form 5875, D103247X012.

P.E.D. Category

This product may be used as a pressure accessory with pressure equipment in the following Pressure Equipment Directive 97/23/EC categories. It may also be used outside of the Pressure Equipment Directive using sound engineering practice (SEP) per table below.

PRODUCT SIZE	CATEGORY
DN 25 / NPS 1	SEP
DN 50 / NPS 2	II
DN 80 / NPS 3	II
DN 100 / NPS 4	II

Specifications

Available Constructions

Type MR108 with low-pressure actuator:

Direct-operated large multi-purpose backpressure regulator with 0.35 to 2.4 bar / 5 to 35 psig pressure range.

Type MR108 with high-pressure actuator:

Direct-operated large multi-purpose backpressure regulator with 1.7 to 20.7 bar / 25 to 300 psig pressure range.

Body Sizes and End Connection Styles

DN 25 and 50 / NPS 1 and 2:

NPT, CL125 FF, CL250 RF, CL150 RF, CL300 RF, CL600 RF and EN PN 16/25/40 RF

DN 80 and 100 / NPS 3 and 4:

CL125 FF, CL250 RF, CL150 RF, CL300 RF, CL600 RF and EN PN 16 RF

Backpressure Control Ranges⁽¹⁾

Low-Pressure Actuator:

0.35 to 0.97 bar / 5 to 14 psig; 0.55 to 1.7 bar / 8 to 24 psig; 0.83 to 2.1 bar / 12 to 30 psig; 1.0 to 2.4 bar / 15 to 35 psig

High-Pressure Actuator:

1.7 to 2.8 bar / 25 to 40 psig; 2.4 to 4.8 bar / 35 to 70 psig; 3.8 to 8.3 bar / 55 to 120 psig; 6.2 to 13.8 bar / 90 to 200 psig⁽²⁾; 12.1 to 20.7 bar / 175 to 300 psig⁽³⁾

Maximum Set pressure⁽¹⁾

Low-Pressure Actuator: 2.4 bar / 35 psig

High-Pressure Actuator:

Nitrile (NBR) and Ethylene Propylene (EPDM)

Diaphragm: 20.7 bar / 300 psig

Fluorocarbon (FKM) Diaphragm:

10.3 bar / 150 psig

Temperature Capabilities⁽¹⁾

Nitrile (NBR): -29 to 82°C / -20 to 180°F

Fluorocarbon (FKM): -7 to 121°C / 20 to 250°F⁽⁴⁾

Ethylene Propylene (EPDM): -29 to 107°C / -20 to 225°F⁽⁶⁾

Maximum Emergency Casing Pressures⁽¹⁾

Low-Pressure Actuator: 4.8 bar / 70 psig

High-Pressure Actuator: 27.6 bar / 400 psig⁽⁵⁾

Maximum Inlet Pressures⁽¹⁾

Low-Pressure Actuator: 4.8 bar / 70 psig

High-Pressure Actuator: 27.6 bar / 400 psig⁽⁵⁾

Maximum Outlet Pressures⁽¹⁾

Low-Pressure Actuator: 4.8 bar / 70 psig

High-Pressure Actuator: 27.6 bar / 400 psig⁽⁵⁾

Maximum Differential Pressures⁽¹⁾

Low-Pressure Actuator: 4.8 bar / 70 psig

High-Pressure Actuator: 27.6 bar / 400 psig

Maximum Pressures over Set Pressure to Avoid Internal Parts Damage⁽¹⁾

Low-Pressure Actuator: 1.4 bar / 20 psig

High-Pressure Actuator: 8.3 bar / 120 psig

Installation



WARNING

Only qualified personnel should install or service a backpressure regulator. Backpressure regulators should be installed, operated and maintained in accordance with international and applicable codes and regulations and Emerson Process Management Regulator Technologies Inc. instructions.

If using a backpressure regulator on a hazardous or flammable fluid service, personal injury and property damage could occur due to fire or explosion of vented fluid that may have accumulated. To prevent such

1. The pressure/temperature limits in this Installation Guide or any applicable limitation should not be exceeded.

2. Maximum set pressure is limited to 10.3 bar / 150 psig for constructions with Fluorocarbon (FKM) diaphragm.

3. Not applicable for constructions with Fluorocarbon (FKM) diaphragm.

4. Fluorocarbon (FKM) is limited to 93°C / 200°F hot water.

5. Maximum Inlet, Outlet and Emergency Casing Pressures for constructions with Fluorocarbon (FKM) diaphragm are limited to 15.8 bar / 230 psig or the body rating limit, whichever is lower.

6. Ethylene Propylene (EPDM) is limited to -7 to 121°C / 20 to 250°F when used with Low Pressure Actuator.



injury or damage, provide piping or tubing to vent the fluid to a safe, well-ventilated area or containment vessel. Also, when venting a hazardous fluid, the piping or tubing should be located far enough away from any buildings or windows so to not create a further hazard and the vent opening should be protected against anything that could clog it.

Personal injury, equipment damage or leakage due to escaping fluid or bursting of pressure-containing parts may result if this backpressure regulator is overpressured or is installed where service conditions could exceed the limits given in the Specifications section or where conditions exceed any ratings of the adjacent piping or piping connections.

To avoid such injury or damage, provide pressure-relieving or pressure-limiting devices (as required by the appropriate code, regulation or standard) to prevent service conditions from exceeding limits. Additionally, physical damage to the backpressure regulator could result in personal injury and property damage due to escaping fluid. To avoid such injury and damage, install the backpressure regulator in a safe location.

Clean out all pipelines before installation of the backpressure regulator and check to be sure the backpressure regulator has not been damaged or has collected foreign material during shipping. For NPT bodies, apply pipe compound to the external pipe threads. For flanged bodies, use suitable line gaskets and approved piping and bolting practices.

Vertical installation with the actuator oriented up or down is recommended. The unit will operate in horizontal installation with actuator on the side, however, this could result in premature wear of parts. Make sure that flow will be in the same direction as that indicated by the body arrow. Orientation of the two vents should always be down. Vents may be rotated after regulator installation so that the vent screens are down.

A control line must be installed to allow inlet pressure to register on the actuator's diaphragm. It should be installed four to eight pipe diameters upstream of the regulator and in an area of pipe that is free of turbulence.

Note

It is important that the backpressure regulator be installed so that the vent hole in the spring case is unobstructed at all times. For outdoor installations, the backpressure regulator should be located away from vehicular traffic and positioned so that water, ice and other foreign materials cannot enter the spring case through the vent. Avoid placing the backpressure regulator beneath eaves or downspouts and be sure it is above the probable snow level.

Overpressure Protection

Maximum inlet pressures depend upon body end connections, materials and temperatures. Refer to the nameplate for the maximum inlet pressure of the valve. The valve should be inspected for damage after any overpressure condition. **Fisher® backpressure regulators are NOT ASME safety relief valves.**

Startup

The backpressure regulator is factory set at approximately the midpoint of the spring range or the pressure requested. If a pressure setting other than specified is desired, be sure to change the pressure setting by following the Adjustment section. With proper installation completed, slowly open the upstream and downstream shutoff valves (if applicable).

Adjustment

To change the control pressure, loosen the locknut and turn the adjusting screw clockwise to increase pressure or counterclockwise to decrease pressure. Monitor the control pressure with a test gauge during the adjustment. Tighten the locknut to maintain the desired setting.

Taking Out of Service (Shutdown)




WARNING

To avoid personal injury resulting from sudden release of pressure, isolate the backpressure regulator from all pressure before attempting disassembly.

Parts List

Key	Description
1	Valve Body
2	Body Flange
3	Stud Bolt
4	Gasket
9	Valve Spring
11	Cage
12	Port Seal
13	Seat Ring
14	Piston Ring
15	Upper Seal
16	Valve Plug
17	Cage O-ring
20	Valve Plug O-ring
21	Adaptor O-ring
24	Drive Screw
25	Flow Arrow
26	Vent
29	Hex Nut
30	Pipe Plug
33	NACE Tag (not shown)
34	Seal Wire (not shown)
38	Pipe Plug
39	Pipe Plug
40	Stem Actuator
41	Flange Nut
43	Nameplate
44	Lube Fitting
45	Wiper Ring
46	Bearing
47	Valve Stem O-ring
48	Jam Nut
49	Spring Washer
51	Lower Diaphragm Head O-ring
52	Lower Spring Guide
53	Lower Diaphragm Head
54	Lower Spring Seat
55	Diaphragm Plate
56	Diaphragm
57	Cap Screw or Stud Bolt
58	Hex Nut
60	Bonnet O-ring
61	Bonnet
62	Lower Diaphragm Casing
63	Upper Diaphragm Casing
64	Spring Case Spacer O-ring
65	Cap Screw
66	Spring Case Spacer
67	Cap Screw
68	Control Spring
69	Upper Spring Seat
70	Spring Case
71	Sealing Washer (not shown)
72	Jam Nut
73	Adjusting Screw
74	Adaptor
76	Pipe Bushing
81	Pipe Nipple (not shown)
82	Drain Valve (not shown)
84	Internal Stiffener Plate
85	Bleed Valve (not shown)
87	Upper Casing Welding Assembly (not shown)

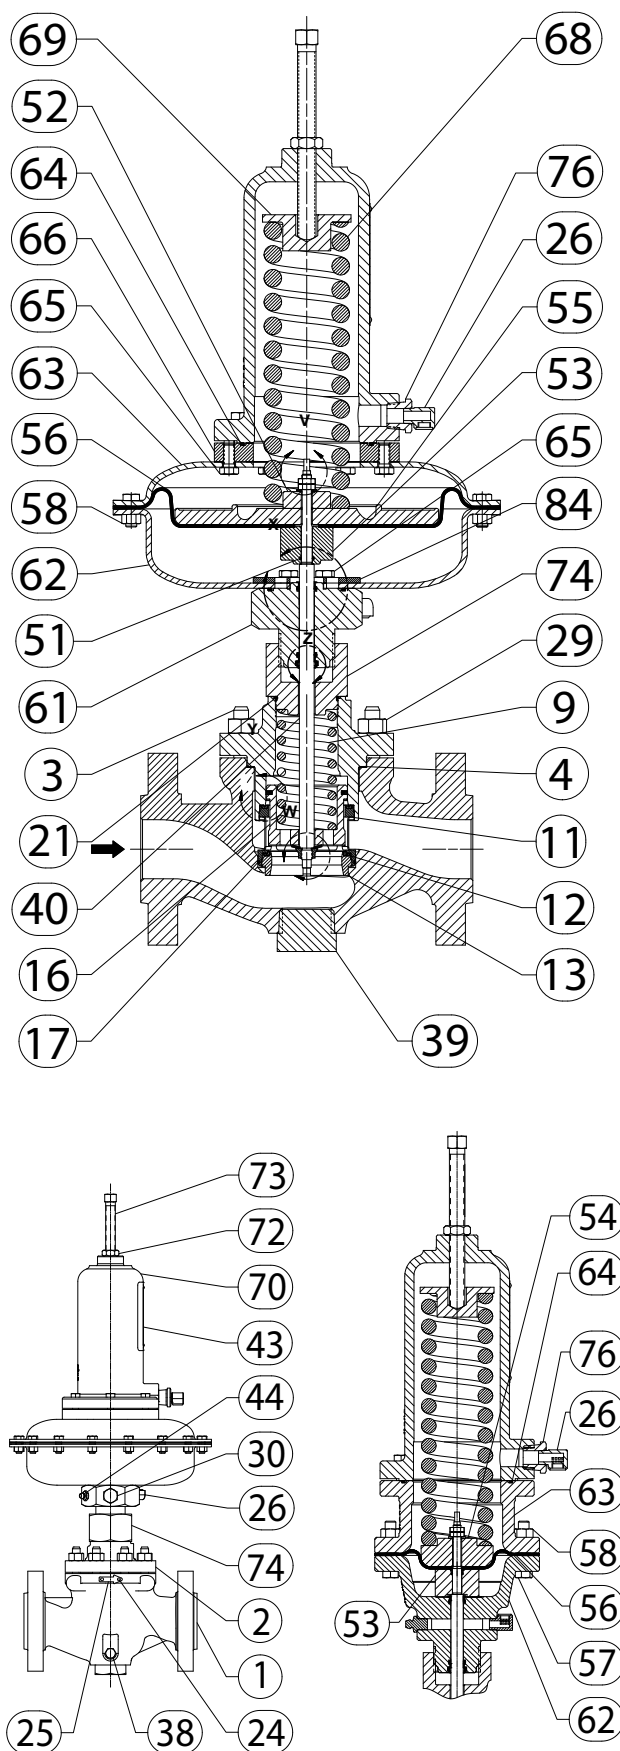

GE38436

Figure 1. Type MR108 Assembly Drawings

Type MR108

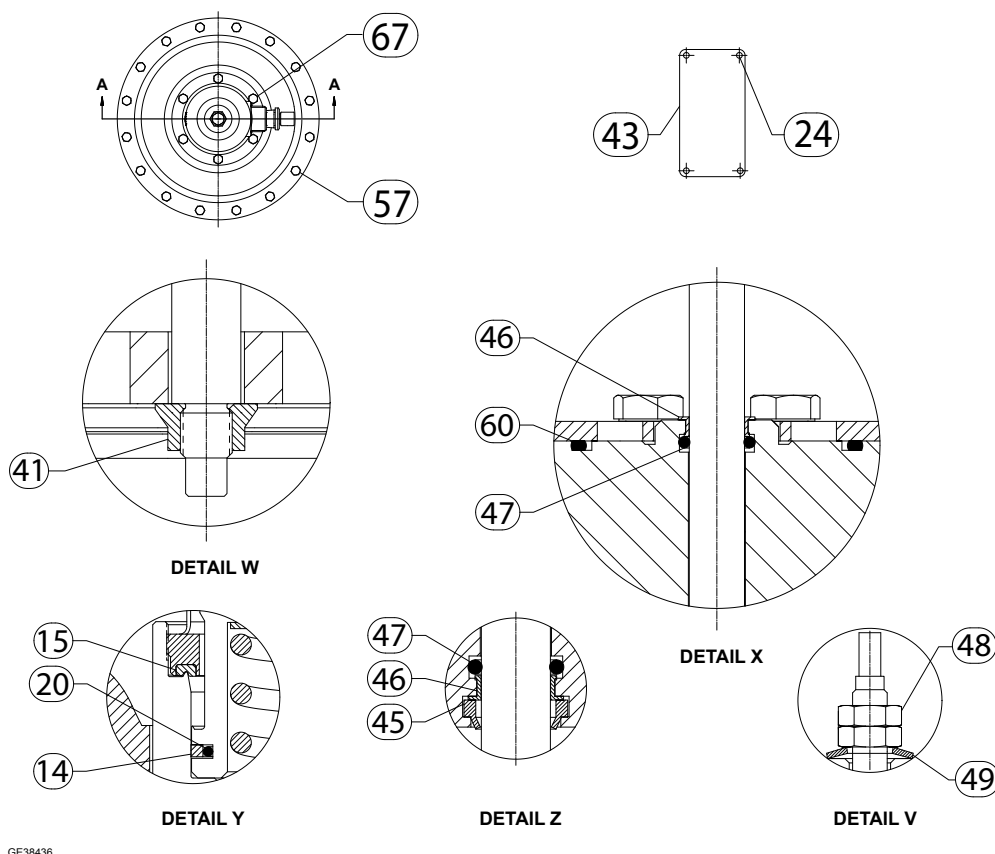


Figure 1. Type MR108 Assembly Drawings (continued)

Industrial Regulators

Emerson Process Management Regulator Technologies, Inc.

USA - Headquarters
McKinney, Texas 75070 USA
Tel: +1 800 558 5853
Outside U.S. +1 972 548 3574

Asia-Pacific
Shanghai 201206, China
Tel: +86 21 2892 9000

Europe
Bologna 40013, Italy
Tel: +39 051 419 0611

Middle East and Africa
Dubai, United Arab Emirates
Tel: +011 971 4811 8100

Natural Gas Technologies

Emerson Process Management Regulator Technologies, Inc.

USA - Headquarters
McKinney, Texas 75070 USA
Tel: +1 800 558 5853
Outside U.S. +1 972 548 3574

Asia-Pacific
Singapore 128461, Singapore
Tel: +65 6770 8337

Europe
Bologna 40013, Italy
Tel: +39 051 419 0611
Chartres 28008, France
Tel: +33 2 37 33 47 00

Middle East and Africa
Dubai, United Arab Emirates
Tel: +011 971 4811 8100

TESCOM

Emerson Process Management Tescom Corporation

USA - Headquarters
Elk River, Minnesota 55330-2445, USA
Tels: +1 763 241 3238
+1 800 447 1250

Europe
Selmsdorf 23923, Germany
Tel: +49 38823 31 287

Asia-Pacific
Shanghai 201206, China
Tel: +86 21 2892 9499

For further information visit www.fisherregulators.com

The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their prospective owners. Fisher is a mark owned by Fisher Controls International LLC, a business of Emerson Process Management.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Process Management Regulator Technologies, Inc. does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Process Management Regulator Technologies, Inc. product remains solely with the purchaser.